

MOOER

JET ENGINE

Digital Flanger Pedal

Owner's Manual

Precautions

PLEASE READ CAREFULLY BEFORE PROCEEDING

Power Supply

Please connect the designated AC adapter to an AC outlet of the correct voltage. Please be sure to use only an AC adapter which supplies 9V DC, ⊕ ⊖ ⊖ ⊕, center negative. Unplug the AC power adapter when not in use or during electrical storms.

Connections

Always turn off the power of this and all other equipment before connecting or disconnecting, this will help prevent malfunction and / or damage to other devices. Also make sure to disconnect all connection cables and the power cord before moving this unit.

Cleaning

Clean only with a soft, dry cloth. If necessary, slightly moisten the cloth. Do not use abrasive cleanser, cleaning alcohol, paint thinners, wax, solvents, cleaning fluids, or chemical-impregnated wiping cloths.

Interference with other electrical devices

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.

Location

To avoid deformation, discoloration, or other serious damage, do not expose this unit to the following conditions:

- Direct sunlight
- Heat sources
- Magnetic fields
- Extreme temperature or humidity
- Excessive dusty or dirty location
- High humidity or moisture
- Strong vibrations or shocks

FCC certification


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference
- This device must accept any interference received, including interference that may cause undesired operation

Main Features

- Digital multi-frequency Flanger
- Two different Flanger modes
- Tap Tempo functionality
- Full metal housing
- True bypass switching

Pedal layout

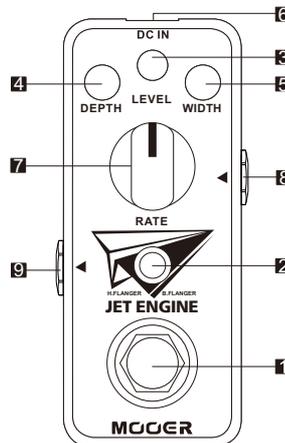

1. Footswitch

Engages and disengages the effect Press and hold to engage "extreme feedback" special effect

2. LED

Displays the on/off status of the pedal. Tap the button once to change Flanger mode.

3. LEVEL

Adjusts the volume/mix of the effect

4. DEPTH

Adjusts the depth and intensity of the effect.

5. WIDTH

Adjusts how wide the frequency range of the effect is

6. DC IN

Input for power supply, use a 9V DC regulated power supply ⊕ ⊖ ⊖ ⊕

7. RATE

Adjusts the speed of the effect

8. INPUT:

1/4" audio jack for connecting to the input device or instrument

9. OUTPUT:

1/4" audio jack, effect output for connection to amp or other devices

Specification

Modes: H. Flanger and B. Flanger

Input: 1/4" mono audio jack. (Impedance: 470k Ohms)

Output: 1/4" mono audio jack (Impedance: 100 Ohms)

Power requirements: AC adapter 9V DC , center negative. Highly recommend to use Moorer Micro Power.

Current Draw: 160mA

Dimensions: 93.5mm(D) x 42mm(W) x 52mm(H)

Weight: 146g

Accessories: Owner's Manual

* Disclaimer: Any specification's update won't be amended in this manual.