开箱/Unpacking

Protection can Temple Knife Switch

3.开关 4.指示灯


Charging indicator Temple Knife 6.网罩 Protection arill nets

7.圆刀 Circular knife 8.充电插头 Clamp spring 9.小毛刷 Brush

10.说明书 User manual Warranty card

! 使用产品前,请仔细阅读产品说明书,问即谓女告体旨。 Read the user manual before using, and safekeep it properly.

木実格依据SI/T11364的抑定编制

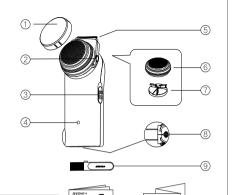

注意事项/Precautions

Warning: Ensure Man Shaver keep dry







- 网罩构造极薄, 并经精密加工, 请勿用尖硬物体碰撞, 否则会损伤网罩以致刮伤皮肤。
- 请勿用水清洗剃须刀。
- ·本产品的使用电压为220V~,为不影响产品的使用寿命,请在电池充满电后从插座上取下,不要让剃须刀连
- 避免摔落本产品或让本产品受到强烈的撞击。

This chart is made according to the SJ/T 11364 regulation

- 不要使用盐水、稀释剂、汽油、酒精或其他化学物品来清洗剃须刀。
- 必须在5℃至35℃之间的温度下充电、使用和存放剃须刀。
- 旅游携带时,应确保将保护置盖上,以保护剃须刀头。
- ・肢体不健全、精神有障碍及缺乏相关经验和知识的人(包括儿童)必须在临护人的监督及指导下使用。
- · 如果剃须刀已损坏,请勿再使用。请按故障种类进行处理,必要时交由本公司维修部门维修。

Means this hazardous substance content in the all of homogeneous material is below the limit requirement of the Means this hazardous substance content in one of the homogeneous material at least is beyond the limit requirement of

● 本标识内数字表示产品在正常使用状态下的环保使用期限为10年,某些部件也可能有环保使用期限标

The number in this mark means this product's environmental protection period is 10 years under normal usage some components.

may also have environmental protection period mark, whose specified environmental protection period subjects to the number in the mark, All components except for the main unit may not be included due to model difference, please subject to the actual sales

其环保使用年限以标识内的数字为准。因型号不同,产品可能不包括除主机外的以上所有部件,请以产

- 不要把非本公司提供的任何附件与本产品使用。
- ・在使用与充电过程中、剃须刀会出现轻微发热、纯属正常现象、造放心使用。
- 产品充电时,请确保剃须刀处于关闭状态。
- 定期清洁剃须刀能保证最佳的剃须效果。
- · 清洁剃须刀前, 请关闭剃须刀。
- 为了保持最理想的剃须效果 建议每两年更换剃须刀斗 并清使用本公司生产的正规配件。
- 1. Please not touch the foil by hard & sharp object as its structure light-minded and precision machining, otherwise may cause the foil demage and scratch our skin,
- 2.Please not dean the man shaver with water.

3.This product's using voltage is 220V~, to make it have the longest lifetime, please don't not plug in the product continuously; 4. Avoid fall off this product or receive intense bombardment.

5.Please not dean the man shaver with the salt water, diluents, casoline, alcohol or other chemicals.

6.Please charge & using & store man shaver under from 5°C to 35°C.

7. Please ensure the protection cap is covered when travel using so as to protect the shaver head.

8.People whose body is not sound, or have mental disorders and lack of relevant experience and knowledge (including children) should use shaver under the supervision and guidance of the guardian.

9.If the man shaver is damaged, please do not use again, Please handle as defective product, if necessary, sent it to maintenance department of the company for maintenance.

10.Don 't use non original parts.

11. Please use trustingly as it is normal phenomenon that man shaver may have a slight fever in the process of using and charging.

12. Please ensure man shaver is under close condition when charging.

- 13.lt can ensure the best shaving effect if deaning the man shaver regularly.
- 14.Please ensure the man shaver closed before cleaning.
- 15. In order to keep best shaving effect, we suggest replace the shaver head every two years, and please use the Superman authentic accessories.

环保提示/Environmental tips

- ——器具所装的电池可能含有对环境有害的物质: ——在废弃器具前 必须将电池从器具中取出:
- ——由池应安全他办置。 ——当丢弃使用寿命到期的产品时,请将电动机元件和其他金属部件放在金属回收箱中。

电池取出步骤:

切断电源, 让产品运行直至电量耗尽。拧开所有螺丝, 打开产品, 然后取出电池。

- --- The batteries in the apparatus may contain harmful substances to the environment:
- --- The battery must be removed from the appliance before the waste apparatus is removed:
- ----Batteries should be disposed safely:
- Battery take out sten:

Cut off the power and let the product run until it runs out of power. Unscrew all the screws, open the product, and take out the battery.

开始使用/Start use 充电/Charging









Please not shave when shaver head has damage avoid hurting your skin.

Address: No.116 Beihu Road, Economic Development Area, Yongkang, Zhejiang, China.

电话 Tel: 0579-87232488 传真 Fax: 0579-87235076 邮编号码 Post code: 321300



清洁与维护/Cleaning And Maintenance













本机为不防水机型,请勿用水冲洗剃须刀。
Please not clean the shaver with water as this unit is not washable.

SID超人

≃品中有害物质的名称及含量 / Hazardous substance name and content in product 六价铬 多溴联苯 多溴二苯醚 Component name (CrMI) (PBB) (PRDE) Plastic component

):表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下 ×:表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T26572规定的限量要求 510超人

configuration.

品实际销售配置为准。

the GB/26572 regulation.

产 品 Product	电动剃须刀 / electric shaver			
型 号 Model	RS 113			
额定电压 Rated voltage	220V~			
额定功率 Rated power	2W			
额定频率 Rated frequency	50Hz			
生产日期 Manufacture date	请见产品本体 / Please see the product main unit			
执行标准 Executive standard	GB4706.9			

见问题	原因	解决办法
项效果不佳	刀头已损坏 刀头变脏 电池电量不足	更换本公司正规刀头 彻底清洁刀头 接通电源充电
机不工作	电池电量已耗尽 开关失效	接通电源充电 返回售后维修
示灯不亮	显示灯/电路故障	返回售后维修
项后出现皮肤过敏	您的皮肤需要—定时间 来适应剃须刀	2-3周适应期后,症状消失
去充电	剃须刀损坏 充电环境温度过低或过高	返回售后维修 在5°C至35°C温度下充电
全充电后, 项时间不足30分钟	剃须时间因您的剃须方式 清洁习惯和胡须密度有关	及时清洁,刀头加少量缝纫机油

Issue	Reason	Solution
Shaving performance	Shaver head is damaged Shaver is too dirty Low battery	Replace with original produced shaver head Clean the shaver head thoroughly Connect with the power for charging
Not work when opening	Battery has run out Switch lose efficacy	Connect with the power for charging Return to the after-sales repairing
Indicators light does not work	Indicators light or circuit board breakdown	Return to after-sales repairing
Skin allergy after shaving	Your skin need some to accommodate the shaver	Symptom shall fade away after accommodating 2-3 weeks
Unable to charge	Shaver is out of work The environment temperature for charging is too low or too high	Return to the after-sales repairing Charge under 5°C to 35°C
After full charging, shaver's working time is less than 30 minutes	your way of shaving,cleaning custom and beard density will lead to different shaver's working time	Clean in time, add a little oil to the cutting head

全国售后服务执线 The after-sales service hotline

固定电话请拨打 800-857-9568

浙江超人科技股份有限公司 Zhejiang Superhuman Technology Co., Ltd 地址: 浙江省永康市经济开发区北湖路116号 Superhuman website

www.supman.com





