


● Features 特性

Extremely low leakage current 低漏电流

Extremely low ESR 低内阻

High pulse power 高功率

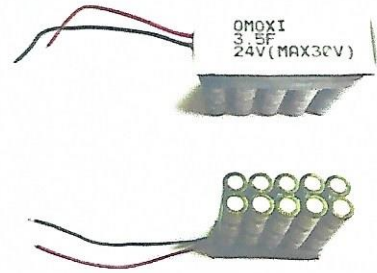

● Applications 应用

More than 100 mA from milli-sec to several min 毫秒级 100mA 以上


Bar-cord scanner GPS/GPRS Wireless modern 扫描仪, 导航, 无线网卡

Digital camera, Container tracking system, CAR AUDIO 数码相机 定位系统 汽车音响

● Specifications 性能参数

Items 项	Characteristics 特性
Rated working Voltage 额定工作电压	27VDC(Max 30V Peak)
Operating Temperature 操作温度	- 40°C to + 70°C      Shock temperature 85 °C
Nominal Cap 额定容量	3.5F
Endurance 耐久性	<p>Capacitance change:±30% of initial measured value 容量变化小于初始值的 30%</p> <p>Internal resistance:≤200% of specified value 内阻值变化小于 2 倍</p> <p>(After 1,000 hours application of rated DC working voltage at +70/+85 °C,the capacitor shall meet the following limits) 额定电压在 70°C或 85°C工作 1000 小时, 参数变化符合上述范围”</p>
Shelf life 保质期	<p>After 1,000 hours storage at+70/+85°C without load the capacitor Shall meet the specified limit for "Endurance" 在+ 70 / + 85°C空载 1000 小时后, 电容器应当达到“耐力”的规定极限 与耐久性范围一致</p>

● Shape of standard product 尺寸(误差为±0.5mm)

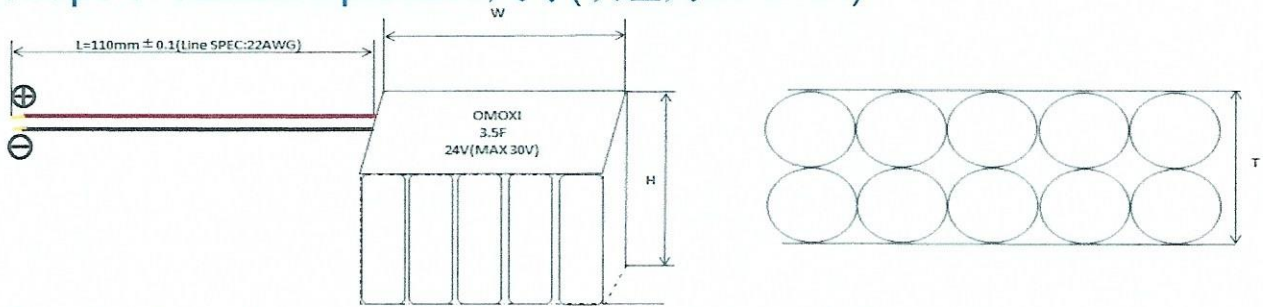


● Standard products and dimensions (not to scale)

Part number	Operating Voltage(V)	Operating Temperature	Capacitance (F)+/-20 %	ESR(Ω)	Φ WxHx T(mm)	Line Red and black (mm)
OMOD027-305L110	27V	- 40°C to + 70°C	3.5F	< 0.25	64 x25 x26	110

● Test method 测试方法

1. According to the standard: 依据标准  
 QC/T 741-2014 《SUPERCAPACITOR FOR CAR SYSTEM》 《车载应用超级电容》  
 DL/T 1652-2016 《Technical specifications for supercapacitors for energy measurement equipment》  
 《电能检测设备超级电容技术规范》
2. Capacitance 容量  
 constant current discharge method 恒流放电测试法
3. Measuring circuit 测试电路

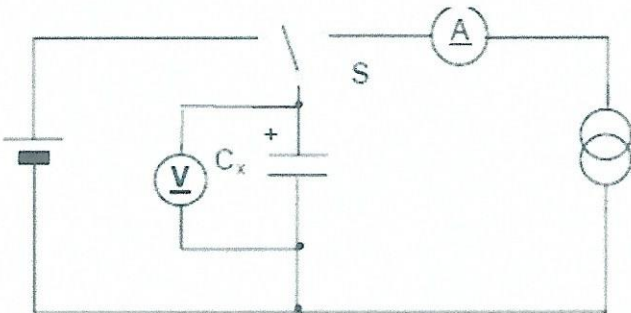

- Ⓐ 直流电流表 DC ammeter
- Ⓥ 直流电压表 DC voltmeter
- S 转换开关 Transfer switch
- C<sub>x</sub> 待测电容 Capacitance under test

图 1 - 恒流放电方法电路 Constant current discharge method circuit

测量方法 measuring method

◎ 恒流/恒压源的直流电压设定为额定电压 (U<sub>R</sub>)

The DC voltage of the constant current / constant voltage source is set to the rated voltage (U<sub>R</sub>).

设定表1中规定的恒电流充放电装置的恒定电流值。

◎ Set the constant current value of the constant current charge and discharge device specified in Table 1.

◎ 将开关S切换到直流电源，在恒流/恒压源达到额定电压后恒压充电30min。

◎ Switch S to DC power supply, and charge at constant voltage for 30 minutes after the constant current / constant voltage source reaches the rated voltage.

◎ 在充电结束后，将开关S变换到恒流放电装置，以恒定电流进行放电。

◎ After charging is completed, switch S is switched to a constant current discharge device, and discharge is performed at a constant current.

◎ 测量电容器两端电压从U<sub>1</sub>到U<sub>2</sub>的时间t<sub>1</sub>和t<sub>2</sub>，如图2所示，根据下列等式计算电容量值：

Measure the time t1 and t2 of the voltage across the capacitor from U1 to U2, as shown in Figure 2, calculate the capacitance value according to the following equation

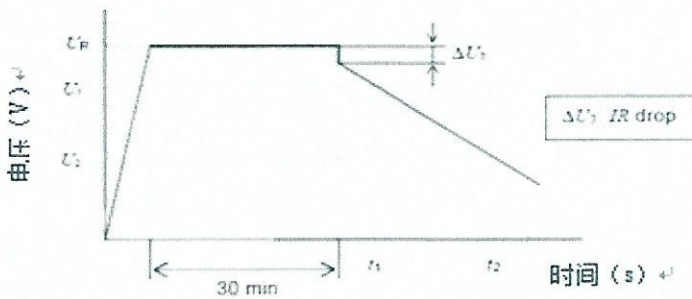


图2 电容器的端电压特性

$$C = \frac{I \times (t_2 - t_1)}{U_1 - U_2}$$

其中

C 容量 (F) capacitance

I 放电电流 (A) ; discharge current

U<sub>1</sub> 测量初始电压 (V) ; test initial voltage

U<sub>2</sub> 测量终止电压 (V) ; test terminal voltage

t<sub>1</sub> 放电电压达到U<sub>1</sub>的时间 (s) ; time of the voltage drop to U1

t<sub>2</sub> 放电电压达到U<sub>2</sub>的时间 (s) 。 time of the voltage drop to U2

放电电流I及放电电压下降的电压U<sub>1</sub>和U<sub>2</sub>参见表1。

表1 - 充放电条件 discharge conditions

分类 classification	SE、HE、HT(叠片产品)	SP、HP、HT、LR	备注 Remarks
应用 application	能量存储 Energy storage	瞬时功率、功率 Instantaneous power, power	$I_1 = \frac{C_R \times U_R}{3600}$
充电时间 Charging time	30min	30min	
I (A)	$I = 5I_1$	$I = 40I_1$	
U1	充电电压的80%值 (0.8×U <sub>R</sub> ) 80% of charging voltage		
U2	充电电压的50%值 (0.5×U <sub>R</sub> ) 50% of charging voltage		
备注: Remarks C <sub>R</sub> 为超级电容器的标称容量, 单位为法拉 (F); CR is the nominal capacity of the supercapacitor, the unit is farad (F); U <sub>R</sub> 额定电压, 单位为伏 (V); UR rated voltage in volts (V); I为充放电测试电流, 单位为安培 (A); I is the charging and discharging test current, the unit is ampere (A); I <sub>1</sub> 为超级电容器1倍充放电电流, 单位为安培 (A) I <sub>1</sub> is the charge and discharge current of super capacitor 1 times, the unit is ampere (A)			

设备: A、ARBIN超电容测试系统 B、线性直流稳压电源C、恒流放电装置D、电压记录仪

Equipment: A, ARBIN supercapacitor test system B, linear DC stabilized power supply C, constant current discharge device D, voltage recorder

3. 内阻Internal resistance

测试方法: 交流阻抗方法Test method: AC impedance method

测量电路Measuring circuit

所示测量电路进行测试。The measurement circuit shown is tested,

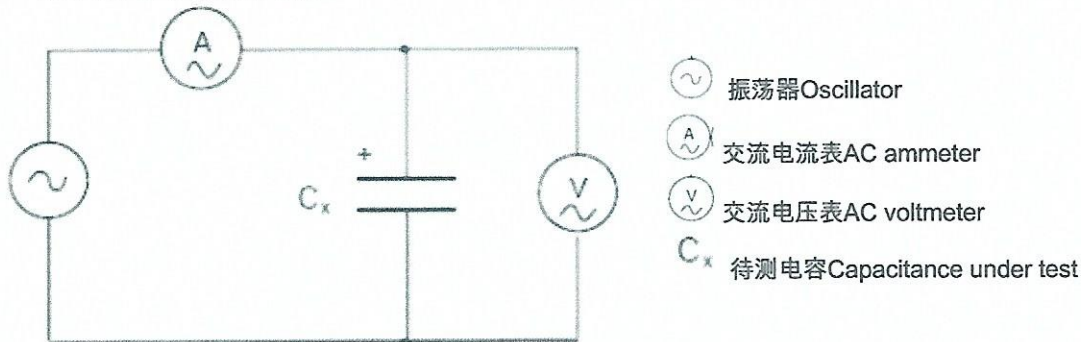


图3- 交流阻抗方法电路 AC impedance method circuit

测量方法measuring method

电容器的内阻Ra应通过下式计算: The internal resistance Ra of the capacitor should be calculated by the following formula:

$$R_a = \frac{U}{I}$$

其中

R<sub>a</sub> 交流内阻 (Ω); Ra AC internal resistance (Ω)

U 交流电压有效值 (V r.m.s) U effective value of AC voltage (V r.m.s)

I 交流电流有效值 (V r.m.s) 。 I Effective value of AC current (V r.m.s)

测量电压的频率, 应为1kHz。The frequency of the measured voltage should be 1kHz.

## ● Note for using: 使用注意事项

1. 超级电容器推荐按固定的极性使用，万一反向，不会造成爆破等危险，但会缩减使用寿命；  
Supercapacitors are recommended to be used with fixed polarity. In case of reverse direction, it will not cause dangers such as explosion, but will reduce the service life.
2. 超级电容器应在标称电压下使用，长时间过电压将导致永久性的损害；  
Supercapacitors should be used at nominal voltage and overvoltage will cause permanent damage.
3. 超级电容器不可应用于高频率充放电的电路中，而是用于直流储能及放电电源使用；  
Supercapacitors are not suitable for high frequency charging and discharging circuits, but for DC energy storage and discharging power supply.
4. 环境温度影响超级电容器的寿命，上限温度和上限电压同时着用，对产品寿命有缩减作用；  
The ambient temperature affects the lifetime of the supercapacitor. The upper temperature and the upper voltage are used simultaneously, which can reduce the lifetime of the product.
5. 在放电的瞬间存在电压降  $\Delta V=IR$ ，内阻越大，电压降幅度越明显；  
There is voltage drop  $V=IR$  at the instant of discharge. The larger the internal resistance, the more obvious the voltage drop.
6. 不可存放于相对湿度大于 85%或含有有毒气体，易燃易爆气体等场所；  
Do not store in places with relative humidity greater than 85% or containing toxic gases, inflammable and explosive gases, etc.
7. 产品应储存在温度 $-30^{\circ}\text{C}\sim 50^{\circ}\text{C}$ 、相对湿度小于 60%的环境中；  
The product should be stored in an environment with temperature  $-30\sim 50\text{ C}$  and relative humidity less than 60%.
8. 超级电容器用于双面电路板上时，要注意连接处，测试孔不可经过电容器可触及的地方，导致短路；  
When using supercapacitors on double-sided circuit boards, attention should be paid to the connection, test holes can not pass through where the capacitors can reach, resulting in short circuit
9. 安装后，不可强行硬扳或扭动或倾斜电容器，导致电容内部结构受损，将导致参数异常；  
After installation, the capacitor should not be forcibly wrenched or twisted or tilted, resulting in damage to the internal structure of the capacitor, which will lead to abnormal parameters.
10. 在焊接过程中要避免使电容器过热（1.6mm 的印刷线路板，焊接时应为  $280^{\circ}\text{C}$ ，时间不超过 3s）  
Avoid overheating capacitors during welding (for 1.6mm printed circuit boards,  $280\text{ }^{\circ}\text{C}$  for no more than 3s)
11. 焊接后，线路板和电容器要清洗干净，建议使用免清洗焊锡，免用助焊剂；  
After welding, the circuit board and capacitor should be cleaned clean. It is recommended to use non-cleaning solder and no solder flux.
12. 超级电容器串联使用时，存在单体间的电压均衡问题，采用主动均衡，被动均衡；  
When supercapacitors are used in series, there is a voltage balance problem between the monomers. Active equalization and passive equalization are used.
13. 不允许进行回流（IR，电磁加热方法等）过程；  
It is not allowed to go through reflow (IR, Atmosphere heating methods etc.) process;
14. 其它使用上的问题，欢迎来电来信咨询。  
For other usage problems, please call us for advice.