# ARINC 429 Protocol Tutorial





# 成都奥林普科技

地址:成都市高新区天府大道南段一号齐盛艺境2-2203号

邮编: 610041

电话: 028-81440815

手机: 13880370209 (24小时服务热线)

邮箱: olyper@sohu.com

官方市场销售QQ: 1511732727 官方技术支持QQ: 1228651984









# **Contents and Tables**

# Contents

| Chapter 1  | ARINC 429 Tutorial                   |
|--|--------------------------------------|
| NETTERON NETTERON POR  | Introduction                         |
|  | About ARINC                          |
|  | What is ARINC 429?                   |
|  | ARINC 429 Usage                      |
|  | ARINC 429 Electrical Characteristics |
|  | Protocol                             |
|  | Bit Timing and Slew Rate             |
|  | ARINC 429 Word Format                |
|  | Parity                               |
|  | SSM                                  |
|  | Data                                 |
|  | SDI                                  |
|  | Label                                |
|  | Transmission Order                   |
|  | ARINC 429 Data Types                 |
|  | BCD Data Encoding                    |
|  | BNR Data Encoding                    |
|  | Mixed Formats                        |
|  | Discrete Data Formats                |
|  | Maintenance Data 1                   |
|  | Data Translation Method              |
|  | Bit Oriented Protocols               |
| Chapter 2  |                                      |
| The state of the s | ARINC 429 Testing                    |
|  | Test Equipment                       |
| Chapter 3  |                                      |
| -  | Other ARINC Protocols                |
|  | ARINC 419                            |
|  | ARINC 453                            |

|                 | ARINC 561/568  | 20 |
|-----------------|--|----|
|                 | ARINC 573  | 20 |
|                 | ARINC 575  | 21 |
|                 | ARINC 582  | 21 |
|                 | ARINC 615  | 21 |
|                 | ARINC 629  | 22 |
|                 | ARINC 708  | 22 |
|                 | ARINC 717  | 22 |
| Appendix A      |  |    |
|                 | References   |    |
|                 | List of References   | 23 |
| able of Figures |  |    |
| 3               | Figure 1. ARINC 429 Bit Encoding Example                                     | 5  |
|                 | Figure 2. Slew Rates and Bit Timing Diagram                                  |    |
|                 | Figure 3. Generalized ARINC Word Format                                      | 7  |
|                 | Figure 4. Generalized BCD Word Format  |    |
|                 | Figure 5. BCD Word Format Example  |    |
|                 | Figure 6. Generalized BNR Word Format  |    |
|                 | Figure 7. Example BNR Encoding   |    |
|                 | Figure 8. File Transfer Scheme Version 1 (no Windows)                        | 16 |
|                 | Figure 9. ARINC 561 6-Wire Bit Encoding                                      |    |
|                 | Figure 10. Harvard Bi-phase Bit Encoding                                     |    |
| ist of Tables   |  |    |
|                 | Table 1. Partial List of Equipment IDs                                       | 4  |
|                 | Table 2. ARINC 429 Characteristic Summary                                    |    |
|                 | Table 3. ARINC Bit Characteristics   | 6  |
|                 | Table 4. SSM Codes for BCD data  | 7  |
|                 | Table 5. SSM Codes for BNR data  | 7  |
|                 | Table 6. Dedicated Discrete Example  | 11 |
|                 | Table 7. Examples of BCD Labels  | 13 |
|                 | Table 8. Examples of BNR Labels  |    |
|                 | Table 9. Equipment IDs for Tables 6 and 7                                    | 13 |
|                 | Table 10. Message Sequence for Label 241                                     |    |
|                 | Table 11. Systems Using Bit Oriented Communications and Their Address Labels | 17 |
|                 |  |    |



# ARINC 429 Protocol

## Introduction

This document provides an overview of ARINC 429 and other ARINC protocols. ARINC 429 is the most commonly used data bus for commercial and transport aircraft. This document explains the origins of the ARINC Corporation, the data bus specification and where ARINC 429 is used. Then it summarizes the principal electrical and data characteristics, which are defined in the specification.

This document is not a complete description of ARINC 429. It is intended only as a brief tutorial and isn't meant to replace the complete specification, which can be purchased from ARINC (see Appendix A, "References" for contact information).

ARINC 429 employs unidirectional transmission of 32 bit words over two wire twisted pairs using bipolar RZ format. This tutorial includes charts illustrating slew times and bit timing. It describes the five fields in each word and explains the use of labels. Messages are repeated at specified intervals with typical applications sending groups or frames of messages. Examples are given of the commonly used word formats such as BNR, BCD, Discrete data, and other formats. Also explained is a newer bit-oriented protocol, sometimes called the Williamsburg Protocol, which has been introduced to provide an improved method of transmitting files of data. Additionally, the document includes a brief explanation of other ARINC specifications, such as 419, 561, 573, 582, 615, and 717.

Frequent references are made to ARINC Specification 429 and many examples are taken from it. This tutorial is intended to introduce you to the subject. Individuals needing more detail should obtain a copy of the specification from ARINC and also should consider consulting other sources identified in the list of references.

This document has been prepared by Condor Engineering Incorporated for use by its employees and customers. Condor is a full-service manufacturer of Test, Simulation, and Interface products for avionics data buses. The hardware and software can be used to monitor or simulate data bus

About ARINC ARINC ARINC 429 Tutorial

messages for analyses and for simulating bus operation. To learn about the full line of Condor products, visit our Web site or contact us by phone or fax. Information can also be obtained via e-mail. See the Copyrights page of this manual for the latest contact information. Detailed installation and user manuals are provided with each product, and demonstration software is available free of charge.

#### About ARINC

Aeronautical Radio, Incorporated (ARINC) is a major company that develops and operates systems and services to ensure the efficiency, operation, and performance of the aviation and travel industries. It was organized in 1929 by four major airlines to provide a single licensee and coordinator of radio communications outside the government. Only airlines and aviation-related companies can be shareholders, although all airlines and aircraft can use ARINC's services. It is now a \$280 million company with headquarters in Annapolis, Maryland and over 50 operating locations worldwide. The company has two major thrusts:

- ... Communications and information processing services for the aviation and travel industry.
- System engineering, development and integration for government and industry.

ARINC has provided leadership in developing specifications and standards for avionics equipment, and one of these specifications is the focus of this tutorial. Industry-wide committees prepare the specifications and standards. ARINC Specification 429 was developed and is maintained by the Airlines Electronic Engineering Committee (AEEC) comprising members that represent airlines, government, and ARINC.

The General Aviation Manufacturers Association (GAMA) in Washington, D.C. also maintains a specification document with ARINC 429 labels: "ARINC 429 General Aviation Subset".

#### What is ARINC 429?

ARINC 429 is a specification, which defines how avionics equipment and systems should communicate with each other. They are interconnected by wires in twisted pairs. The specification defines the electrical and data characteristics and protocols, which are used. ARINC 429 employs a unidirectional data bus standard known as Mark 33 Digital Information Transfer System (DITS). Messages are transmitted at a bit rate of either 12.5 or 100 kilobits per second to other system elements, which are monitoring the bus messages. Transmission and reception is on separate ports so that many wires may be needed on aircraft, which use a large number of avionics systems.

#### ARINC 429 Usage

ARINC 429 has been installed on most commercial transport aircraft including; Airbus A310/A320 and A330/A340; Bell Helicopters; Boeing 727, 737, 747, 757, and 767; and McDonnell Douglas MD-11. Boeing is installing a newer system specified as ARINC 629 on the 777, and some aircraft are using alternate systems in an attempt to reduce the weight of wire needed and to exchange data at a higher rate than is possible with ARINC 429. The unidirectional ARINC 429 system provides high reliability at the cost of wire weight and limited data rates. Military aircraft generally use a high-speed, bi-directional protocol specified in Military Specifications MIL-STD-1553.

Each aircraft may be equipped with different electronic equipment and systems needing interconnection. A large amount of equipment may be involved depending on the aircraft. These are identified in the specification and are assigned digital identification numbers called Equipment ID. A partial list of equipment identified in ARINC Specification 429-15 can be found in Table 1 along with their digital addresses.

The specification also identifies a number of systems, which are capable of interchanging files of data in a bit-oriented format. Such files may require the transmission of a number of messages in sequence. Systems capable of bit-oriented communications and their addresses are listed in Table 10. The SAL is used to identify the recipient of a bit oriented message.

#### ARINC 429 Electrical Characteristics

An ARINC 429 data bus uses two signal wires to transmit 32 bit words. Transmission of sequential words is separated by at least 4 bit times of NULL (zero voltage). This eliminates the need for a separate clock signal wire. That's why this signal is known as a self-clocking signal.

The nominal transmission voltage is 10 ±1 volts between wires (differential), with either a positive or negative polarity. Therefore, each signal leg ranges between +5V and -5V. If one leg is +5V, the other is -5V and vice versa. One wire is called the "A" (or "+" or "HI") side and the other is the "B" (or "-" or "LO") side. This is known as bipolar return-to-zero (BPRZ) modulation. The composite signal state may be one of three levels:

- HI which should measure between 7.25 and 11 volts between the two wires (A to B).
- ... NULL which should be between 0.5 and -0.5 (A to B).
- .. LO which should be between -7.25 and -11 volts (A to B).

The received voltage depends on line length and the number of receivers connected to the bus. No more than 20 receivers should be connected to a single bus. Since each bus is unidirectional, a system needs to have its own transmit bus if it is required to respond or to send messages.

Table 1. Partial List of Equipment IDs

| Eq. ID | Equipment Type                         | Eq. ID | Equipment Type                             |
|--------|--|--------|--|
| 001    | Flight Control Computer (701)          | 029    | ADDCS (729) and EICAS                      |
| 002    | Flight Management Computer (702)       | 02A    | Thrust Management Computer                 |
| 003    | Thrust Control Computer (703)          | 02B    | Perf. Nav. Computer System (Boeing 737)    |
| 004    | Inertial Reference System (704)        | 02C    | Digital Fuel Gauging System (A310)         |
| 005    | Attitude and Heading Ref. System (705) | 02D    | EPR Indicator (Boeing 757)                 |
| 006    | Air Data system (706)                  | 02E    | Land Rollout CU/Landing C & LU             |
| 007    | Radio Altimeter (707)                  | 02F    | Full Authority EEC-A                       |
| 800    | Airborne Weather Radar (708)           | 030    | Airborne Separation Assurance System       |
| 009    | Airborne DME (709)                     | 031    | Chronometer (731)                          |
| 00A    | FAC (A310)                             | 032    | Passenger Entertain. Tape Reproducer (732) |
| 00B    | Global Positioning System              | 033    | Propulsion Multiplexer (PMUX) (733)        |
| 00D    | AIDS Data Management System            | 034    | Fault Isolation and Detection System (734) |
| 010    | Airborne ILS Receiver (710)            | 035    | TCAS (735)                                 |
| 011    | Airborne VOR Receiver (711)            | 036    | Radio Management System (736)              |
| 012    | Airborne ADF System (712)              | 037    | Weight and Balance System (737)            |
| 016    | Airborne VHF COM Receiver (716)        | 038    | ADIRS (738)                                |
| 017    | DEFDARS-AIDS (717)                     | 039    | MCDU (739)                                 |
| 018    | ATC Transponder (718)                  | 03A    | Propulsion Discrete Interface Unit         |
| 019    | Airborne HF/SSB System (719)           | 03B    | Autopilot Buffer Unit                      |
| 01A    | Electronic Supervisory Control         | 03C    | Tire Pressure Monitoring System            |
| 01B    | Digital Flap/Slat Computer (A310)      | 03D    | Airborne Vibration Monitor (737/757/767)   |
| 01C    | Engine Parameter Digitizer (Engine)    | 03E    | Center of Gravity Control Computer         |
| 01D    | A/P & F/D Mode Control Panel -757/767  | 03F    | Full Authority EEC-B                       |
| 01E    | Performance Data Computer (Boeing)     | 040    | Cockpit Printer                            |
| 01F    | Fuel Quantity Totalizer                | 041    | Satellite Data Unit                        |
| 020    | DFS System (720)                       | 046    | СТИ  |
| 023    | Ground Proximity Warning Sys (723)     | 047    | Digital Flight Data Recorder               |
| 024    | ACARS (724)                            |        | additional items                           |
| 025    | Electronic Flt. Instruments (725)      |        | #  |
| 026    | Flight Warning Computer (726)          | 2002   | #  |
| 027    | Microwave Landing System (727)         | 241    | High Power Amplifier                       |

The transmitting and receiving circuits must be designed for reliably sending and detecting the null transition between high and low states. The parameters vary with the type of operation as defined in Reference 2. The

slew rates and tolerances are shown in Figure 1 for both 100K and 12.5K data rates.

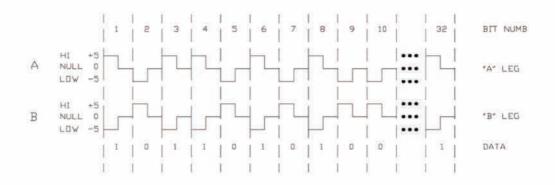


Figure 1. ARINC 429 Bit Encoding Example

Table 2 summarizes ARINC 429 characteristics.

Table 2. ARINC 429 Characteristic Summary

| Electrical Characteristic                       | Value                         |  |  |  |  |  |
|---|-------------------------------|--|--|--|--|--|
| Voltage Levels, each leg with respect to ground | +5V, 0V, -5V                  |  |  |  |  |  |
| Voltage Levels, Leg A with respect to Leg B     | +10V, 0V, -10V                |  |  |  |  |  |
| Bit Encoding                                    | Bipolar Return to Zero        |  |  |  |  |  |
| Word size                                       | 32 bits                       |  |  |  |  |  |
| Bit Rates                                       | 100K or 12.5K bits per second |  |  |  |  |  |
| High Speed Slew Rate                            | 1.5 +/- 0.5 μsec              |  |  |  |  |  |
| Low Speed Slew Rate                             | 10 +/- 5 μsec                 |  |  |  |  |  |

#### Protocol

ARINC 429 is a very simple, point-to-point protocol. There can be only one transmitter on a wire pair. The transmitter is always transmitting either 32-bit data words or the NULL state. There is at least one receiver on a wire pair; there may be up to 20.

In most cases, an ARINC message consists of a single data word. The label field of the word defines the type of data that is contained in the rest of the word.

# Bit Timing and Slew Rate

The slew rate refers to the rise and fall time of the ARINC waveform. Specifically, it refers to the amount of time it takes the ARINC signal to rise from the 10% to the 90% voltage amplitude points on the leading and trailing edges of the pulse. See Figure 2.

| Parameter        | High Speed       | Low Speed                |  |  |  |  |
|------------------|------------------|--------------------------|--|--|--|--|
| Bit Rate         | 100K bits/second | 12.5K-14.5K bits/second  |  |  |  |  |
| Time Y (one bit) | 10 μsec ± 2.5%   | 1÷(bit rate) μsec ± 2.5% |  |  |  |  |
| Time X           | 5 μsec ± 5%      | Y/2 μsec ± 5%            |  |  |  |  |
| Pulse Rise Time  | 1.5 ± 0.5 μsec   | 10 ± 5 μsec              |  |  |  |  |
| Pulse Fall Time  | 1.5 ± 0.5 μsec   | 10 ± 5 μsec              |  |  |  |  |

**Table 3. ARINC Bit Characteristics** 

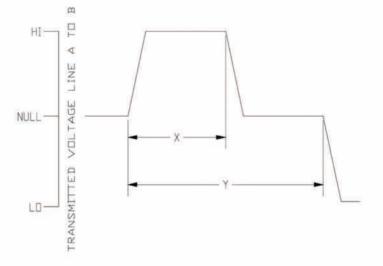


Figure 2. Slew Rates and Bit Timing Diagram

ARINC 429 Tutorial ARINC 429 Word Format

# ARINC 429 Word Format

ARINC data words are always 32 bits and typically use the format shown in Figure 3 which includes five primary fields, namely Parity, SSM, Data, SDI, and Label. ARINC convention numbers the bits from 1 (LSB) to 32 (MSB).



Figure 3. Generalized ARINC Word Format

#### Parity

The MSB is always the parity bit for ARINC 429. Parity is normally set to odd except for certain tests. Odd parity means that there must be an odd number of "1" bits in the 32-bit word that is insured by either setting or clearing the parity bit. For example if bits 1-31 contain an even number of "1" bits, bit 32 must be set to create ODD parity. On the other hand, if bits 1-31 contain an odd number of "1" bits, the parity bit must be clear.

#### SSM

Bits 31 and 30 contain the Sign/Status Matrix or SSM. This field contains hardware equipment condition, operational mode, or validity of data content. Applicable codes are shown in Table 4and

Table 5.

Table 4. SSM Codes for BCD data

| Bit |    | Meaning                               |
|-----|----|---------------------------------------|
| 31  | 30 |                                       |
| 0   | 0  | Plus, North, East, Right, To, Above   |
| 0   | 1  | No Computed Data                      |
| 1   | 0  | Functional Test                       |
| 1   | 1  | Minus, South, West, Left, From, Below |

Table 5. SSM Codes for BNR data

| Bit |    | Meaning |  |
|-----|----|---------|--|
| 31  | 30 |         |  |

| 0 | 0                 | Failure Warning  |  |  |  |  |  |
|---|-------------------|------------------|--|--|--|--|--|
| 0 | 1                 | No Computed Data |  |  |  |  |  |
| 1 | 0 Functional Test |                  |  |  |  |  |  |
| 1 | 1                 | Normal Operation |  |  |  |  |  |

#### Data

Bits 29 through 11 contain the data, which may be in a number of different formats. Some examples are provided later in the tutorial. There are also many non-standard formats that have been implemented by various manufacturers. In some cases, the data field overlaps down into the SDI bits. In this case, the SDI field is not used.

#### SDI

Bits 10 and 9 provide a Source/Destination Identifier or SDI. This is used for multiple receivers to identify the receiver for which the data is destined. It can also be used in the case of multiple systems to identify the source of the transmission. In some cases, these bits are used for data. ARINC 429 can have only one transmitter on a pair of wires, but up to 20 receivers.

#### Label

Bits 8 through 1 contain a label identifying the data type and the parameters associated with it. The label is an important part of the message and is described in more detail below. It is used to determine the data type of the remainder of the word and, therefore, the method of data translation to use. The various data types are described in detail below. Labels are typically represented as octal numbers.

#### Transmission Order

The least significant bit of each byte except the label is transmitted first, and the label is transmitted ahead of the data in each case. The order of the bits transmitted on the ARINC bus is as follows:

8, 7, 6, 5, 4, 3, 2, 1, 9, 10, 11, 12, 13 ... 32.

Note:

When a 32-bit ARINC word is transmitted on the bus, in the case of the label, the most significant bit is transmitted first. This reverse order is in contrast to the transmission order of the other bits in the ARINC word.

ARINC 429 Tutorial Bit Oriented Protocols

## **Bit Oriented Protocols**

The Williamsburg, or "bit oriented", Protocol is a system for transferring files between ARINC units. It was originally defined in ARINC Specification 429-12 and expanded in Specifications 429-13 and 14 and is further defined in Reference 5. It is currently under revision. It should be used in lieu of the former AIM, file transfer, and maintenance formats used in Specification 429-11. Normal ARINC data messages can be intermixed with the bit-oriented messages of the Williamsburg Protocol.

A start up procedure is used to determine the proper protocol for transferring data. When a system element wants to use the bit-oriented system it transmits a message using the latest version of which it is capable. A handshaking process adjusts the protocol to the lowest common denominator that both sending and receiving systems can use. Currently, two versions of the Protocol are available. Version 1 is defined in 429-12 and refined in 429-13. Version 2 is defined in 429-14 but was never used. Reference 5 deletes Version 2 and it defines a new Version 3. It redefines Version 1 to facilitate the communications of the ACARS Management Unit (MU) and the Satellite Data Unit (SDU).

The source initiates communications by sending certain predefined codes. If a bit-oriented transfer is desired, the initial code word will be an "ALO" (for Aloha) signal to the potential recipient. The ALO word should be sent by any system that supports the protocol just after the system powers up, or performs a re-initialization for any reason. If any sink is capable of receiving bit-oriented data it responds with an "ALR" code so that the source knows that it can transmit to that unit. When a source wants to transmit to a unit capable of handling the protocol, it sends a Request to Send word (RTS), and waits to receive a Clear to Send (CTS). The RTS includes a Destination Code and a Word Count, which are repeated in the CTS for verification. If the CTS is correct, the source then initiates the file transfer, following the sequence shown in Figure 8 for version 1. The latter version provides the capability of sending a larger file (up to 7 LDUs), without needing to renew permission of the sink.

Files are transferred in blocks called Link Data Units (LDU) ranging in size from 3 to 255 words. Following receipt of the CTS, the source initiates a Version 1 transfer with a Start of Transmission word (SOT). The SOT includes a file sequence number, a General Format Identifier (GFI), and a LDU Sequence Number. The data words are then sent, followed by the (up to) 255th word which is an End of Transmission (EOT). Each LDU transfer (255 words or less) is terminated by an End of Transmission Word (EOT). The EOT includes a CRC and identifies the position of the LDU in the overall file transfer. The sink performs a verification process on the EOT, and sends an Acknowledgment Word (ACK) if all tests are passed. The source then sends another CTS, and the process is repeated until the last LDU is acknowledged.

# ARINC 429 Data Types

All ARINC data is transmitted in 32 bit words. The data type may be Binary Coded Decimal (BCD), two's complement binary notation (BNR), Discrete Data, Maintenance Data and Acknowledgment, and ISO Alphabet #5 character data. In the newest versions, bit oriented packets of messages can be used to transmit files.

#### **BCD Data Encoding**

BCD, or binary-coded-decimal, is a common data format found in ARINC 429 and many other engineering applications. In this format, four bits are allocated to each decimal digit. A generalized BCD message is shown in Figure 4. Its data fields contain up to five sub-fields. The most significant sub-field contains only the bits, so that its maximum decimal value can be 7. If the maximum decimal value is greater than 7, bits 29 through 27 are padded with zeros and the second sub-field becomes the most significant. The example message in Figure 5 conveys the data that the DME distance is 25786 and has a positive sign. The specific equipment, numeric scale, and location of the decimal point are a function of the label and are discussed later.




Figure 4. Generalized BCD Word Format

| 32 | 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 | 15 | 14 | 13 | 12 | 11 | 10 | 9   | 8 |       | 1 |
|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|-----|---|-------|---|
| Р  | SS | SM | 0  | 1  | 0  | 0  | 1  | 0  | 1  | 0  | 1  | 1  | 1  | 1  | 0  | 0  | 0  | 0  | 1  | 1  | 0  | SI | DI. |   | LABEL |   |
|    | 0  | 0  |    | 2  |    |    |    | 5  |    |    | 7  | 7  | T  |    | 8  | 3  |    |    | e  | 6  |    |    |     |   |       |   |

Figure 5. BCD Word Format Example

#### **BNR Data Encoding**

BNR or "binary" encoding is also a very common ARINC data format. This type of encoding simply stores the data as a binary number, much in the same format that is used on virtually every modern-day computer. Figure 6 shows the general BNR format. Bit 29 is the sign bit and bit 28 is the most significant bit of the data field, which represents one half of the maximum value of the parameter being defined. Successive bits represent the increments of a binary fraction series.

| 32 | 31 | 30 | 29 | 28   | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 | 15 | 14 | 13 | 12  | 11 | 10 | 9  | 8 |       | 1 |
|----|----|----|----|------|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|-----|----|----|----|---|-------|---|
| Р  | SS | SM |    | Data | а  |    | 90 |    |    |    |    |    |    |    |    |    |    |    |    | Pad |    | S  | DI |   | LABEL |   |

Figure 6. Generalized BNR Word Format

Negative numbers are encoded as the two's complement of positive values. If bit 29 is a '1' then the number is negative (or South, West, Left, From, or Below). Otherwise, it is positive (or North, East, Right, To, or Above).

Figure 7 shows an example of BNR encoding. The particular message uses label 103, which is Selected Airspeed. By referencing the ARINC 429 specification, we know that the scale is 512, and 11 bits are used (29 through 19). A zero in bit 29 shows that this is a positive value. The numeric value is obtained by multiplying the scale factor, determined from data type associated with the label, by the ratio indicated by each successive bit and adding them together. Bit 28 is  $\frac{1}{2}$  of the scale factor (256 in this case), bit 27 is  $\frac{1}{4}$  of the scale factor, bit 26 is  $\frac{1}{8}$  of the scale factor, bit 23 is  $\frac{1}{64}$ , bit 22 is  $\frac{1}{128}$ , etc. Thus, in this example, Selected Airspeed = 268 Knots (256 + 8 + 4).




Figure 7. Example BNR Encoding

This may appear to be more complex than it really is. The underlying principle is conventional binary mathematics as performed by any modern day computer. A computer programmer can shift the BNR data and sign bits into a program variable and manipulate them directly with any standard mathematical manipulation.

#### Mixed Formats

The 32-bit message words can also include discrete information, either mixed with BCD or BNR data, or as separate messages. Unused bits in a word may be assigned one bit per variable starting in Bit #11 until the data field is reached. If there are no discretes encoded the word, the unused positions are filled with zeros.

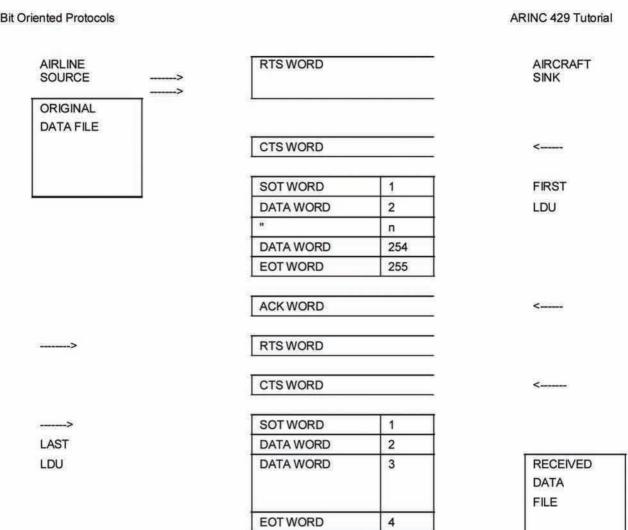


Figure 8. File Transfer Scheme Version 1 (no Windows)

ACK WORD

## Discrete Data Formats

A large number of ARINC 429 words are dedicated entirely to discretes; these are spelled out in Reference 3. Table 6 shows a word used to transmit engine data.

**Table 6. Dedicated Discrete Example** 

| Bit | Function                               | 1         | 0        |
|-----|--|-----------|----------|
| 1   | Label 005                              | X         |          |
| 2   | Label 005                              |           | X        |
| 3   | Label 005                              | X         |          |
| 4   | Label 005                              |           | X        |
| 5   | Label 005                              |           | Х        |
| 6   | Label 005                              |           | Х        |
| 7   | Label 005                              |           | X        |
| 8   | Label 005                              |           | X        |
| 9   | SDI                                    |           |          |
| 10  | SDI                                    |           |          |
| 11  | PAD                                    |           | Х        |
| 12  | PAD                                    |           | Х        |
| 13  | Failure to clear serial data interrupt | Fail      | Pass     |
| 14  | ARINC received fail                    | Fail      | Pass     |
| 15  | PROM checksum fail                     | Fail      | Pass     |
| 16  | User RAM fail                          | Fail      | Pass     |
| 17  | NV RAM address fail                    | Fail      | Pass     |
| 18  | NV RAM bit fail                        | Fail      | Pass     |
| 19  | RTC fail                               | Fail      | Pass     |
| 20  | Microprocessor fail                    | Fail      | Pass     |
| 21  | Battery low                            | Fail      | Pass     |
| 22  | NV RAM corrupt                         | Fail      | Pass     |
| 23  | Notused                                |           |          |
| 24  | Notused                                |           |          |
| 25  | Notused                                |           |          |
| 26  | Interrogate activated                  |           |          |
| 27  | Erase activated                        | Activated | Non-Act. |
| 28  | Bit activated                          | Activated | Non-Act. |
| 29  | SSM                                    | Activated | Non-Act. |
| 30  | SSM                                    |           |          |
| 31  | SSM                                    |           |          |

Data Translation Method ARINC 429 Tutorial

| Bit | Function     | 1 | 0 |
|-----|--------------|---|---|
| 32  | Parity (Odd) |   |   |

#### Maintenance Data

ARINC 429 also provides for transmission and acknowledgment of maintenance data and alphanumeric messages. These functions usually involve exchanging a sequence of messages. Alphanumeric messages use ISO Alphabet No. 5. These message types are being superseded by a bitoriented protocol, which is described later in the tutorial. If you need more information, refer to the specification.

#### **Data Translation Method**

Each data item that can be transmitted is assigned a label code, and these are listed in ARINC Specification. Examples of labels are shown in Table 7 for BCD and Table 8 for BNR.

ARINC 429 Tutorial Bit Oriented Protocols

Table 11. Systems Using Bit Oriented Communications and Their Address Labels

| SYSTEM                           | SAL<br>(OCT) | SYSTEM                              | SAL<br>(OCT) |  |
|----------------------------------|--------------|-------------------------------------|--------------|--|
| 777 CABIN INTERPHONE SYSTEM      | 152          | LOW SPEED DATA LINK (ARINC 603)     | 300          |  |
| 747 DFDR AND A330/340 SSFDR      | 163          | FMC 1                               | 300          |  |
| DFDAU (Mandatory Load Functions) | 170          | FMC 2                               | 301          |  |
| SDU #2                           | 173          | DFDAU (AIDS)                        | 302          |  |
| RFU                              | 174          | CFDIU                               | 303          |  |
| HGA/HPA TOP/PORT                 | 175          | ACARS MU/CMU (724B, 748)            | 304          |  |
| HGA/HPA STARBOARD                | 176          | WBS                                 | 305          |  |
| LGA/HPA                          | 177          | TCAS                                | 306          |  |
| GPS/GNSS SENSOR                  | 201          | SDU #1                              | 307          |  |
| MCDU 1                           | 220          | CABIN TELECOMMUNICATIONS UNIT (CTU) | 334          |  |
| MCDU 2                           | 221          | HF DATA RADIO/DATA UNIT #1          | 340          |  |
| MCDU 3                           | 222          | HF DATA RADIO/DATA UNIT #2          | 344          |  |
| PRINTER 1                        | 223          | ACESS                               | 360          |  |
| PRINTER 2                        | 224          | EFIS                                | 361          |  |
| HIGH SPEED DL (ARINC 615)        | 226          | ENGINE INDICATION UNIT              | 365          |  |
| MCDU 4                           | 230          | CABIN TERMINAL 3                    | 372          |  |
| EIVMU 1                          | 234          | CABIN TERMINAL 4                    | 373          |  |
| EIVMU 2                          | 235          | CABIN TERMINAL 1                    | 374          |  |
| EIVMU 3                          | 236          | CABIN TERMINAL 2                    | 375          |  |
| EIVMU 4                          | 237          | OMEGA NAV. SYSTEMS                  | 376          |  |
| CABIN VIDEO SYSTEM (AIRSHOW)     | 266          |                                     |              |  |

ARINC 429 Tutorial Data Translation Method

Table 7. Examples of BCD Labels

| Label | Equip ID<br>(hex) | Parameter Name                 | Units               | Range<br>Scale | Digits | + | Res. | Min. Tx<br>Rate<br>(Msec) | Max.Tx<br>Rate<br>(Msec) |
|-------|-------------------|--------------------------------|---------------------|----------------|--------|---|------|---------------------------|--------------------------|
| 010   | 002               | Present Position -<br>Latitude | Degrees-<br>Minutes | 180N -<br>180S | 6      | N | 0.1  | 250                       | 500                      |
|       | 004               | Present Position -<br>Latitude | Degrees<br>Minutes  | 180N -<br>180S | 6      | N | 0.1  | 250                       | 500                      |
|       | 038               | Present Position -<br>Latitude | Degrees<br>Minutes  | 180N -<br>180S | 6      | N | 0.1  | 250                       | 500                      |
| 014   | 004               | Magnetic Heading               | Degrees             | 0 -359.9       | 4      |   | 0.1  | 250                       | 500                      |
|       | 005               | Magnetic Heading               | Degrees             | 0 -359.9       | 4      |   | 0.1  | 250                       | 500                      |
|       | 038               | Magnetic Heading               | Degrees             | 0 -359.9       | 4      |   | 0.1  | 250                       | 500                      |

Table 8. Examples of BNR Labels

| Label | Equip ID (hex)                                    | Parameter Name       | Units | Range<br>(Scale) | Bits | Res. | Min. Tx<br>Rate<br>(Msec) | Max. Tx<br>Rate<br>(Msec) |
|-------|---|----------------------|-------|------------------|------|------|---------------------------|---------------------------|
| 064   | 03C   | Tire Pressure (nose) | psia  | 1024             | 10   | 1.0  | 50                        | 250                       |
| 102   | 02 002 Selected Altitude<br>020 Selected Altitude | feet                 | 65536 | 16               | 1.0  | 100  | 200                       |                           |
|       |   | feet                 | 65536 | 16               | 1.0  | 100  | 200                       |                           |
|       | 029   | DC Current (Battery) | amps  | 256              | 8    | 1.0  | 100                       | 200                       |
|       | 0A1   | Selected Altitude    | feet  | 65536            | 16   | 1.0  | 100                       | 200                       |

Labels may be associated with more than one equipment type, and the equipment IDs associated with the examples are shown in Table 9. Thus BCD label 010 is always present latitude, but it can pertain to three different sources, the Flight Management Computer, the Inertial Reference System, or ADIRS. BCD label 014 is either Magnetic Heading from the Inertial Reference System, Attitude and Heading Reference System, or ADIRS.

Table 9. Equipment IDs for Tables 6 and 7

| Equipment ID (Hex) | Equipment Type                        |  |  |  |  |
|--------------------|---------------------------------------|--|--|--|--|
| 002                | Flight Management Computer            |  |  |  |  |
| 004                | Inertial Reference System             |  |  |  |  |
| 005                | Attitude and Heading Reference System |  |  |  |  |
| 020                | DFS System                            |  |  |  |  |
| 029                | ADDCS and EICAS                       |  |  |  |  |
| 038                | ADIRS                                 |  |  |  |  |
| 03C                | Tire Pressure Monitoring System       |  |  |  |  |
| 0A1                | FCC Controller                        |  |  |  |  |

Data Translation Method ARINC 429 Tutorial

In Table 8 BNR label 064 is the nose tire pressure from the Tire Pressure Monitoring System. BNR label 102 can be selected altitude or DC current depending on the equipment ID. Table 7 and Table 8 also show the parameters which identify the units of measure, the range or scale, the significant digits (BCD) or bits (BNR), the positive sense of the quantity, its resolution, maximum and minimum transit interval, and for some labels, the maximum transport delay.

Typically, messages are sent repetitively. For example, measured airspeed is transmitted from the sensor to the instrument at intervals not less than 100 milliseconds or greater than 200 milliseconds. Messages may also be sent in repetitive word sequences or frames. Messages from each fuel tank level sensor are sent in sequence, and then the sequence is repeated after a specified time. The specific data source to which the data applies is determined either by the Label or the SDI.

Table 10 shows label 241, which is transmitted approximately once per second. The sequence shown starts with the left main tank followed by the right and then center. Once the 63-word sequence is completed, it repeats, starting over with word 1. Most of the data is in BNR format, but some words are in BCD.

Table 10. Message Sequence for Label 241

| Word  | Signal                             | Units   | Range   | Sig.<br>Digits | Resolution | Data |
|-------|------------------------------------|---------|---------|----------------|------------|------|
| 1     | Left Main Tank #1                  | pF      | 319.922 | 12             | .078125    | BNR  |
| 2-13  | Left Main Tanks #1 to #13          | pF      | 319.922 | 12             | .078125    | BNR  |
| 14    | Left Main Tank #14                 | pF      | 319.922 | 12             | .078125    | BNR  |
| 15    | Left Main Bite Cap. No. 1          | pF      | 319.922 | 12             | .078125    | BNR  |
| 16    | Left Main Compensator              | pF      | 319.922 | 12             | .078125    | BNR  |
| 17    | Load Select 10,000                 | Lb.     | 0-90000 | 1              | 10,000     | BCD  |
| 18    | Load Select 1,000                  | Lb.     | 0-9000  | 1              | 1,000      | BCD  |
| 19    | Load Select 100                    | Lb.     | 0-900   | 1              | 100        | BCD  |
| 20    | No Data Transmitted                |         |         | 2016           |            |      |
| 21    | Left Main Fuel Density             | Lb./Gal | 8,000   | 12             | .000977    | BNR  |
| 22-42 | Repeat Words 1-21 for Right Tanks  |         |         |                |            |      |
| 43-53 | Repeat Words 1-21 for Center Tanks |         |         |                |            |      |
| 54-58 | No Data Transmitted                |         |         |                |            |      |
| 59    | Load Select 10,000                 | Lb.     | 0-90000 | 1              | 10,000     | BCD  |
| 60    | Load Select 1,000                  | Lb.     | 0-9000  | 1              | 1,000      | BCD  |
| 61    | Load Select 100                    | Lb.     | 0-900   | 1              | 100        | BCD  |
| 62    | No Data Transmitted                |         | ,       |                |            |      |
| 63    | Center Tank Density                | Lb./Gal | 8,000   | 12             | .000977    | BNR  |

ARINC 453 Other ARINC Protocols

is the most widely applied Digital Data Transmission specification for modern transport aircraft. ARINC 429 draws on the experience of 419 but does not depend on it.

## ARINC 453

Not a formally released specification. See ARINC 708.

#### ARINC 561/568

The need for standardized digital data transmission arose during the development of ARINC Characteristics 561, "Air Transport Inertial Navigation System". ARINC 568 uses the same electrical interface as ARINC 561.

A six-wire system involving 3 pairs of wires, was used in 561. The three pairs served as "clock", "sync", and "data" respectively. Non return to zero (NRZ) was employed, and a twelve-volt logic level was transmitted for a binary 1. The word length was 32 bits. Bits 32 and 31 contained the SSM, and no parity bit was provided. The remaining fields included an 8-bit label and 6 BCD fields, five of 4 bits and one of 2 bits. In 1967 the six-wire system was adopted as an industry standard.

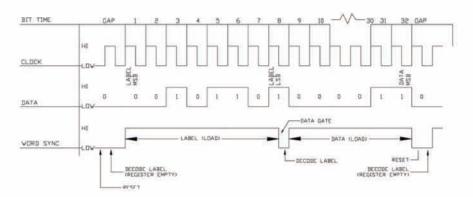


Figure 9. ARINC 561 6-Wire Bit Encoding

## ARINC 573

Other standards include ARINC 573, a Flight Data Recorder output format. This device sends a continuous data stream of Harvard Bi-Phase encoded 12 bit words which is encoded in frames. The data in a frame consists of a snapshot of the many avionics subsystems on the aircraft. Each frame contains the same data at a different snapshot in time.

Other ARINC Protocols ARINC 575

Each frame is broken into four sub-frames. At the start of each sub-frame is a unique sync word that is used by the receiver to synchronize with the incoming data.

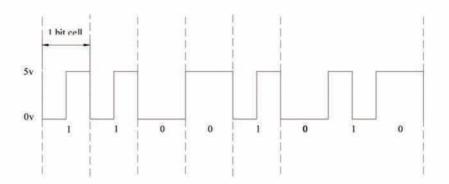


Figure 10. Harvard Bi-phase Bit Encoding

#### ARINC 575

ARINC 575 is an older specification very similar to ARINC 429 but now obsolete. It accommodated the Mark 3 Subsonic Air Data System (DADS) with a single twisted pair of wires, which has become the standard in ARINC 429. Electrically, ARINC 575 is generally compatible with low speed ARINC 429. Some variants of 575 use a bit rate that is significantly slower than ARINC 429 and are not electrically compatible. Also, in some cases, ARINC 575 words use bit 32 as parity (as does ARINC 429); in other cases bit 32 is used as data.

#### ARINC 582

This is an older specification that has many electrical permutations. There are 6-wire versions (see ARINC 561), 2-wire versions (see ARINC 575) as well as 16-bit, 2-wire versions.

## ARINC 615

Special cases of ARINC 429 compliant systems also exist. ARINC 615 (See Reference 8) describes a high-speed data loader to transfer information to and from on board digital systems. It is a software protocol layered on top of an ARINC 429 physical layer. There are two versions of the loader. PDL is a portable flight line piece of test equipment and ADL is designed to fit in commercial aircraft instrument panels. Both equipment are capable of reading and writing to 3½ inch diskettes and transferring

data between the diskettes and a selected airborne computer. The transfers can occur automatically, or via an ARINC 429 data bus. Data can be either uploaded or downloaded as desired.

# ARINC 629

Additional ARINC standards are being developed. ARINC 629 is used on the new Boeing 777 Aircraft. It uses a high-speed bi-directional bus capable of either periodic or aperiodic transmissions. Access to the bus is controlled by a sophisticated protocol involving wait periods, quiet periods and other rules. Further details can be found in Reference 9.

#### ARINC 708

This protocol is specific to airborne weather radar systems. It is used as the output from the radar to the radar display. The bus uses 2-wires, is simplex, Manchester encoded and runs at a one-megabit data rate. It was originally based upon a simple derivative of MIL-STD-1553 technology. The data words are 1600 bits long which is composed of one, 64-bit status word and 512, 3-bit data words.

#### ARINC 717

ARINC 717 supercedes ARINC 573 and is used to perform the same function. It adds a number of different bit rates and frame sizes. It also provides for an alternate output data stream that is identical to the primary, Harvard Bi-phase encoded stream, except that it is encoded in BPRZ format (the same as ARINC 429).